

# QUICK START GUIDE

## Setting up StreamPay



### 1. STREAMPAY CARD READER AND COVER PLATE INSTALLATION

Your Nibly vending machine is equipped to handle all forms of electronic payment. Your machine will come supplied with a card reader. Your machine panel has 2 “knockouts” to facilitate the installation of either the card reader. Here is how install the card reader on your configuration. If you wish to add other payment options now or in the future contact your Nibly Vending Representative.

### 2. INSTALL STREAMPAY CARD READER SYSTEM

Each machine will come with a StreamPay Card reader. The unit comes in 2 parts; the front bezel called a card reader which your customers will use and the telemetry unit which is installed inside your machine.

a. Install the reader onto the bezel.



b. Install the reader in the device opening using the screws mounted in the frame.




## QUICK START GUIDE

### Setting up StreamPay



#### 2. INSTALL STREAMPAY CARD READER SYSTEM, CONTINUED

c. Connect the USB-C cable and Silkron MDB adapter Y cable to the reader unit.

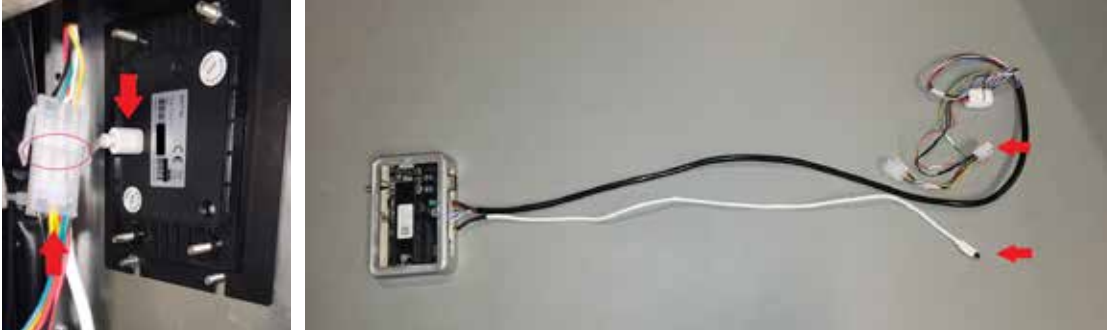

d. Plug in the Silkron MDB adapter Y cable and the USB-C Cable into the Telemetry Unit.



e. Install the antenna on top of the door. Thread the cable inside the machine through hole in top of door. Then plug in Antenna into Telemetry Unit.



f. The telemetry unit will install on the open space in the instrument panel below the card reader on inside of the door. Keep cables clear of the edge of the door to avoid damage.

g. Once your StreamPay system has been installed, record the telemetry unit and card reader serial numbers for each machine and register and submit these numbers with StreamPay (see the StreamPay section of the manual). Registration is necessary to accept cashless transactions.